
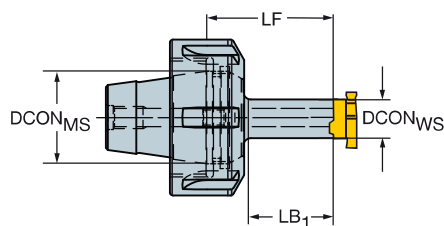


ER naar CoroMill® 327 adapter


Koppeling machinezijde DIN 6499-B

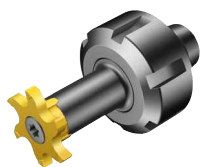

		Afmetingen, mm									
CZC _{MS}	CZC _{WS}	Bestelnummer	DCON _{MS}	DCON _{WS}	LF	LB ₁	BD ₁	NM	KG	RPMX	
ER11	09	392.ER327-11 09 022	11,4	9,0	25,0	16,0	9,0	4,30	0,07	40000	
ER16	09	392.ER327-16 09 022	17,0	9,0	26,8	16,2	9,0	4,30	0,15	40000	
	12	392.ER327-16 12 030	17,0	12,0	34,8	24,3	12,0	6,50	0,22	40000	
ER20	12	392.ER327-20 12 030	21,0	12,0	34,7	24,8	12,0	6,50	0,25	40000	
	14	392.ER327-20 14 035	21,0	14,3	38,9	28,8	14,0	6,50	0,27	40000	
ER32	14	392.ER327-32 14 035	33,0	14,3	41,3	28,8	14,0	6,50	0,50	25000	

Opmerking!

De moer is geen standaard ER-moer en dus niet uitwisselbaar met het reserve-onderdeel series 5533 050-0X. Die moer zit altijd bij de set!

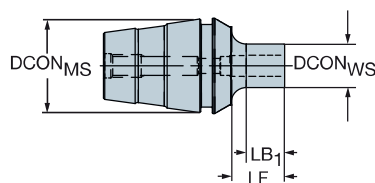

		Afmetingen, mm									
CZC _{MS}	CZC _{WS}	Bestelnummer	DCON _{MS}	DCON _{WS}	LF	LB ₁	BD ₁	NM	KG	RPMX	
ER11	06	327-ER11-06-016	11,4	6,0	17,5	12,8	6,0	1,80	0,03	40000	
ER20	09	327-ER20-09-022	21,0	9,0	24,7	16,5	9,0	4,30	0,09	40000	
ER25	09	327-ER25-09-022	26,0	9,0	25,2	16,5	9,0	4,30	0,13	32000	
	12	327-ER25-12-030	26,0	12,0	33,2	24,6	12,0	6,50	0,22	32000	
	14	327-ER25-14-019	26,0	14,3	22,9	14,3	14,0	6,50	0,21	32000	
	14	327-ER25-14-035	26,0	14,3	37,4	28,8	14,0	6,50	0,23	32000	
ER32	12	327-ER32-12-030	33,0	12,0	34,2	24,6	12,0	6,50	0,31	25000	
	14	327-ER32-14-019	33,0	14,3	23,9	14,3	14,0	6,50	0,30	25000	

Ga voor reserveonderdelen naar www.sandvik.coromant.com



M1



N23